

This modification is required in order to fit a standard UK bath waste.

Note.

1. The waste on the Bath doesn't connect to UK fittings having a 28mm Flexible Outlet.
2. The waste body thread (where the bowl connects) isn't BSP, so a traditional trap couldn't be attached.
3. It also has a leak potential due to the absence of a seal in the hose bowl (if used).
4. Therefore, Discard this hose.



Modify the existing overflow to fit a new waste.




Using Screwfix 966RW - Use the parts following parts ;

Grey Waste Body – no innards

Side Nut

Side Tapered Seal

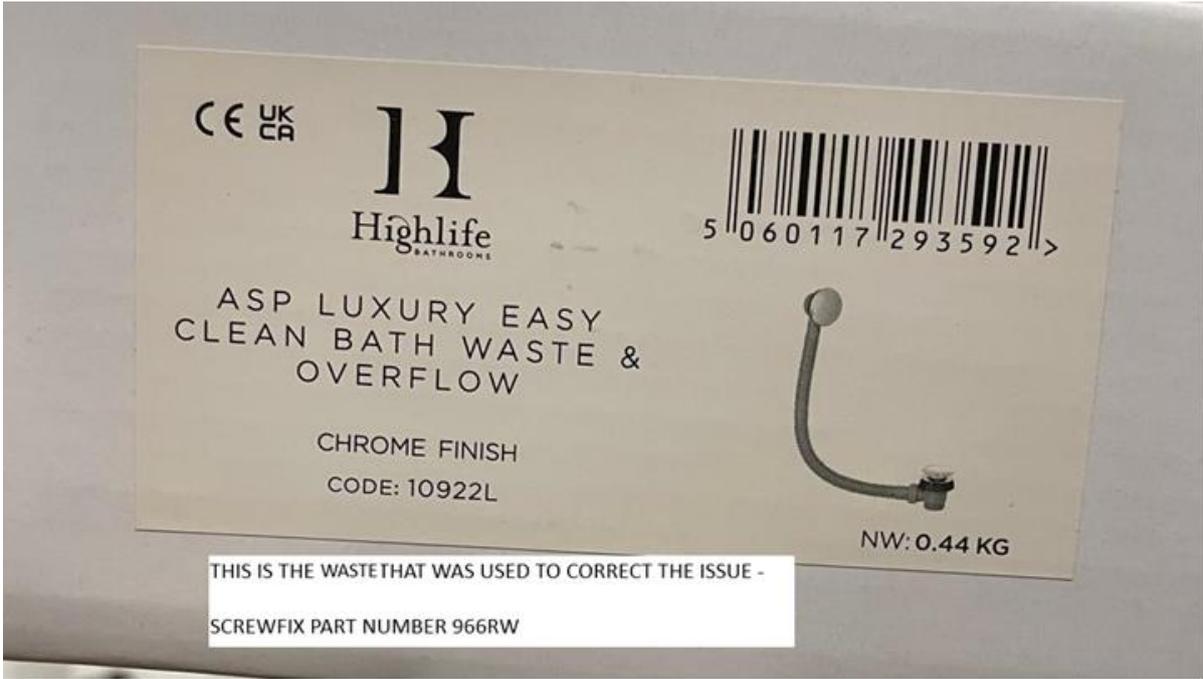

The bath was then water tested, the waste and overflow performed as expected.



We would need to supply the new waste and instruction with each bath as these parts are only available at Rubberduck Bathrooms, Screwfix and other plumbers merchants. The current parts aren't sufficient.