

## **Bi-fold Door**


## **ASSEMBLY GUIDE**

## IMPORTANT

- 1.. The cubicle can be constructed either way up, for left or right hand opening.
- 2.. These instruction and list of parts assume that installation is done against solid or tiled walls. Hollow or "Stud partition" walls will require alternatie fixings. Please consult a hardware supplier for the correct type. It may also be necessary to consult your tiling supplier about the correct method for drilling your tiles.
- **3..** Please check this product for damage prior to starting the installation. No claims can be made after the products has been fitted, or after fitting has commenced.
- **4..** This is a 2 person installation.
- 5.. Please note the minimum and maximum adjustment for this product are based on perfectly plumb walls.

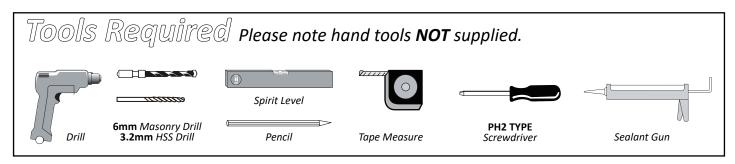


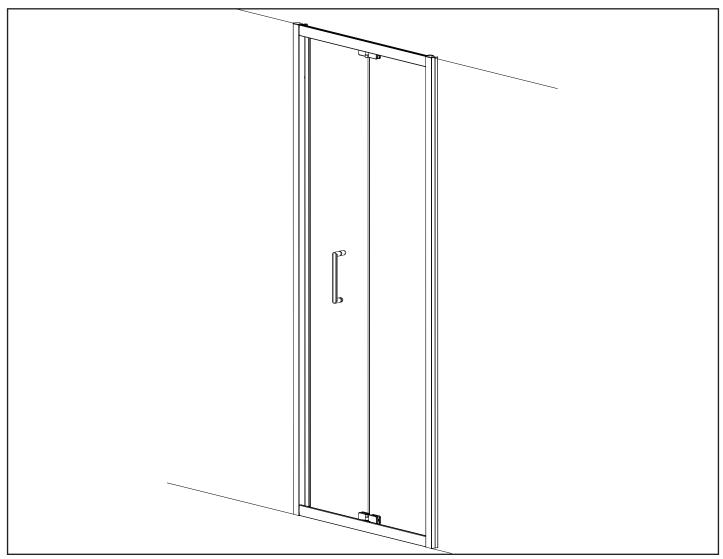


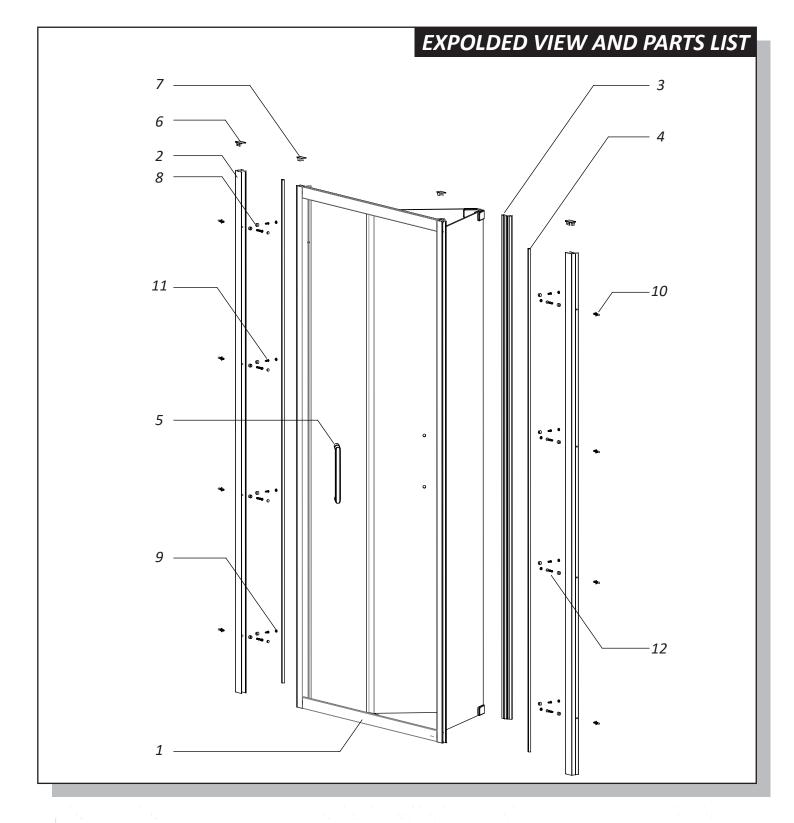



## Part List

SN	CODE	Description	Qty	Image	SN	CODE	Description	Qty	Image
1	N/M	Door Panel	1		7	S1PS05	Upright Profile Cap	2	R
2	ALU8654	Wall channel	2		8	S1PS07	Screw Cup	16	
3	301AC-3	Joining Seal	1	]-v-E	9	S1PS08	Screw Cap	16	1
4	R1021F-2	Upright Seal	2	О	10	SBLTL001	Wall Plug	8	4
5	S1HW27	182 Handle	1	4	11	SBLTL003	ST3.5x12 Tapping Screw	8	
6	S1PS04	Wall channel Cap - LH/RH	2		12	SBLTL013	ST4.0x30 Tapping Screw	8	-

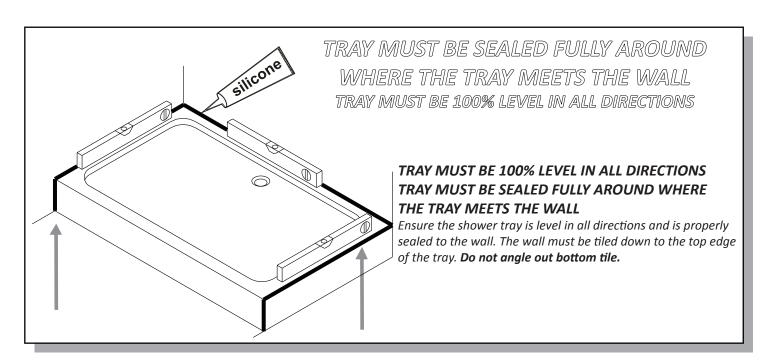

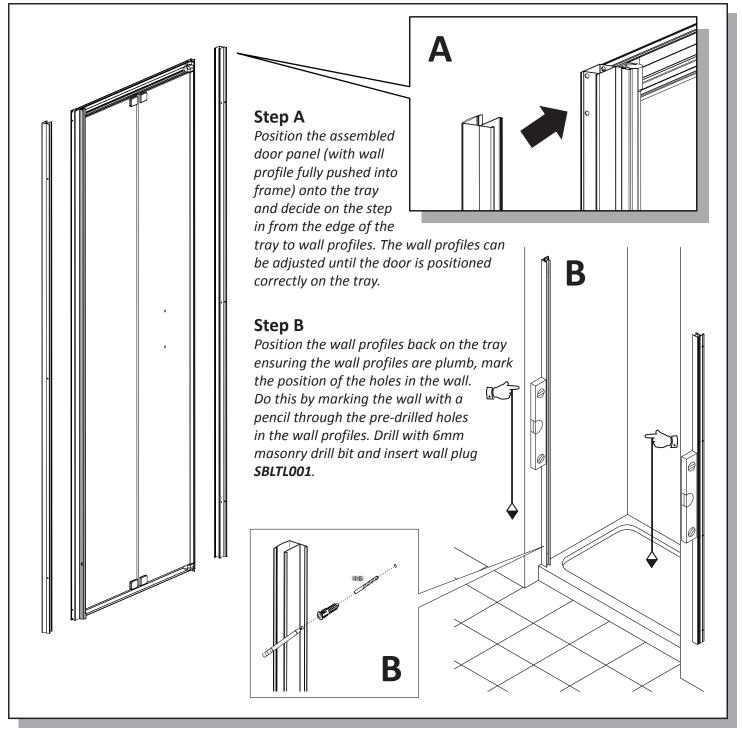

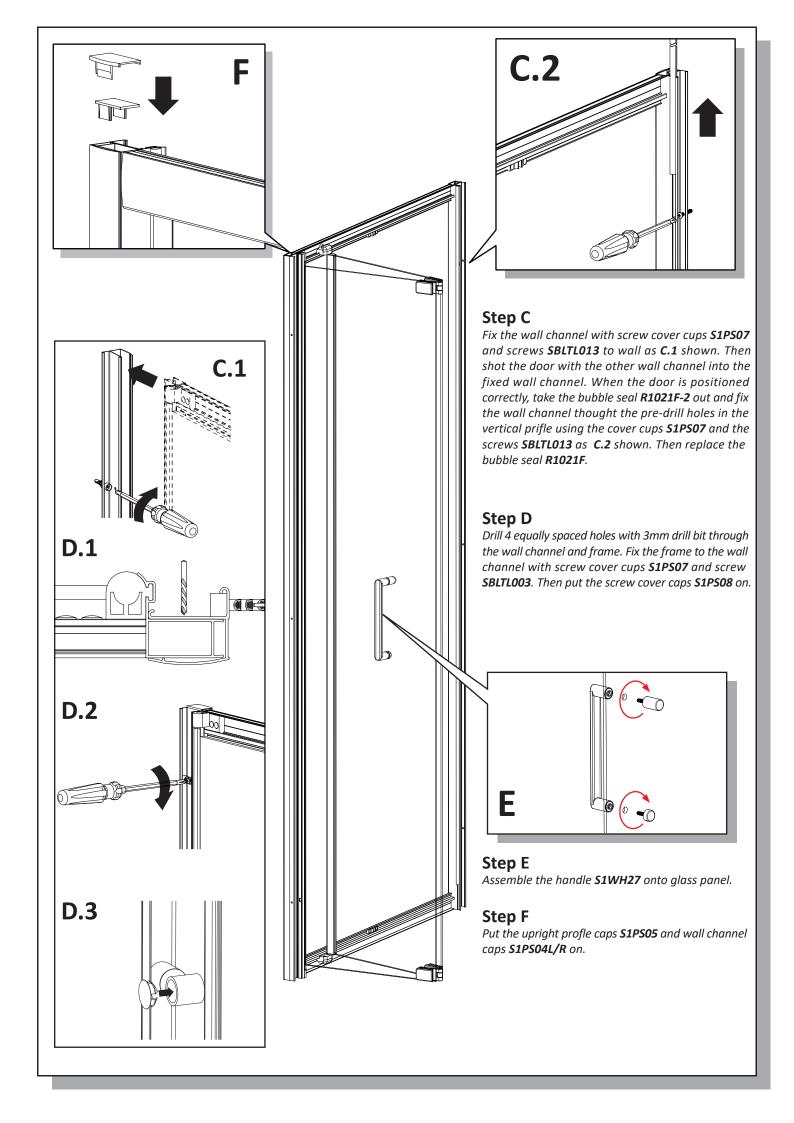

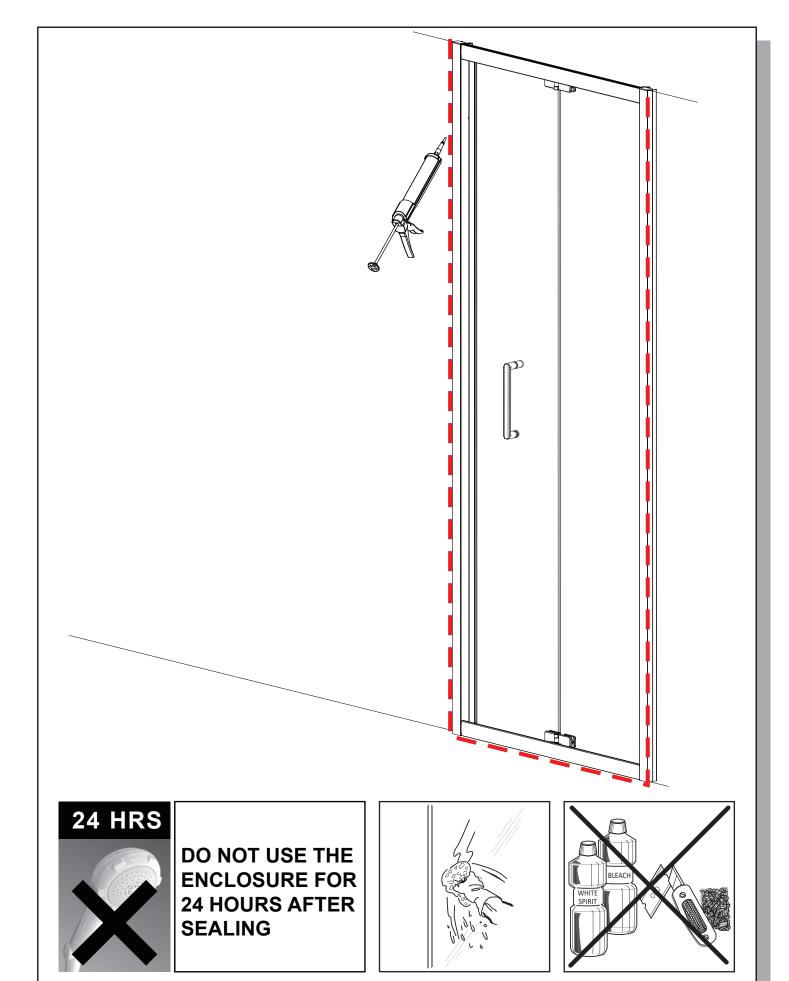

Step H Applying Silicone Sealant And Cleaning

Seal from the top of the wall channel to the bottom on the **INSIDE** and **Outside** between the wall channel and the wall, and between the bottom profile and shower tray as shown. Wash down with clean warm water and a soft clean cloth or sponge. Please do not use bleach, alkaline or acid-based, aggressive or abrasive cleaning products.